

GOLDENROD

IMPORTANT: Always mount cutoff valve between filter and tank!

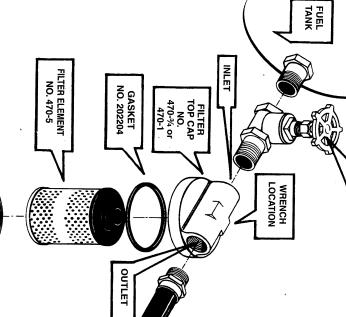

FUEL TANK

BOWL IS DESIGNED FOR USE WITH GASOLINE, GASOHOL OR DIESEL FUEL. USE WITH OTHER CHEMICALS COULD RESULT IN STRESS CRACKS AND LEAKAGE.

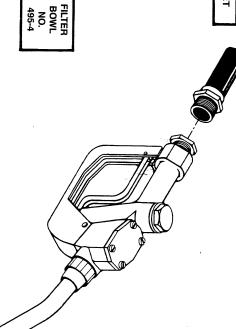

INSTALLATION INSTRUCTIONS

Attach filter top cap to storage tank valve on opening marked "IN". Be sure there is a shutoff valve between filter and tank. Attach hose and nozzle to filter opening marked "OUT". CAUTION: Do not tighten filter cap using the filter bowl for leverage. Apply wrench to flat surfaces in center part of filter cap to tighten or remove. See illustration.

When installing the element and bowl, apply a coating of oil to each side of gasket #202204. These components should be hand tightenec only. Over tightening of the filter bowl will result in difficulty in removal at a later date. When assembly is complete, check for leaks.

Change filter element when dirty or when flow is restricted.

NOTE: This filter is rated for 150 psi pressure. If the fuel system is prone to violent pressure surges (water hammers, etc.), a pressure cushion device should be installed. A vertical capped pipe installed in the line near the filter so that it traps a pocket of air will serve this function. This is not necessary unless pressure surges above 150 psi occur.

No. 491

Filter Bowl Wrench

Fits bowl perfectly for easy removal.

Hangs on fuel tank. (Ask your dealer!)

A DEPENDABLE COMPANY – SINCE 1886

DUTTON-LAINSON COMPANY HASTINGS, NE 68902 U.S.A. TEL 402-462-4141 FAX 402-460-4612

Made in U.S.A.