

factair

F4001 & F4001ED

SAFE-AIR TESTER

OPERATING MANUAL



Contents

	Page No
Introduction	3
Calibration & Warranty	3
Diagram and Equipment List	4
1 - Pre Use	5
2 - Testing- High Pressure systems 200 & 300 bar	5
3 - Exporting test Results and PC Software	8
Helpful Tips	9
Appendix 1 - Configuring the Safe-Air Tester	10
Appendix 2 - Draeger reagent type oil tube ref.6728371	10
Appendix 3 - Draeger Tube Tip Cutter	11
Appendix 4 - Reading and disposal of Draeger Tubes and Oil Impactor	12
Appendix 5 – Air Quality Testing – Why?	16
A.4.5 Compressed Air for Breathing Apparatus from EN529	17
COSHH L5 (Fifth Edition 2005)	18
Respiratory Protective Equipment at Work	20

Introduction

Safe-Air Testers are designed to provide a quick and easy method to carry out accurate periodic testing of breathing-air supplies. The European Standard for breathing-air quality is EN12021, which should be referred to in conjunction with any overriding national standards.

The F4001, is designed specifically to test high pressure air breathing air cylinders and high pressure charging systems up to 300bar.

The F4001 has a touch screen display and is supplied in a hard weatherproof case with storage provision for a wide range of accessories and equipment. It is primarily designed to be used from within the case; however the tester can also be removed and operated separately where space is at a premium.

The test is carried out using the Draeger Impactor for oil and chemical reagent tubes for carbon monoxide, carbon dioxide and water*. These are supplied in packs of 10 per type and the chemical reagent tubes show the degree of contaminant present as a colour change to the crystals that they contain. The extent of this is read against the scale on the tube. For the Impactor the degree of oil contamination is displayed on a screen.

Calibration and Warranty

Safe-Air Testers leave our factory with a 12-month warranty and calibration certificate. Our standard turnaround on annual calibration is 10 working days providing there is no major damage that requires an extensive rebuild. *(Allow an extra 5 working days for calibration of ED versions)*

Note: - Please download all stored data before returning the Tester to Factair.

Temperature Parameters

Storage -20/+50°C. Operating Range -10/+45°C


This tester is calibrated for the following approved reagent tubes/Impactor.

H ₂ O (water-reagent tube)*	Draeger ref. 6728531
CO (carbon monoxide-reagent tube)	Draeger ref.6728511
CO ₂ (carbon dioxide-reagent tube)	Draeger ref.6728521
Oil (Impactor) **	Draeger ref.8103560

**Note: - water reagent tube is not required with the F4001ED which will automatically record the moisture and dewpoint readings*

***Note:- The tester can also be used with the old type Draeger reagent tube ref.6728371. (Refer to Appendix 2 rear of manual for instructions.)*

IMPORTANT – IT IS RECOMMENDED THAT YOUR SAFE-AIR TESTER IS RETURNED FOR RECALIBRATION AND SERVICING WITHIN 12 MONTHS FROM THE ISSUE DATE OF ITS CALIBRATION CERTIFICATE

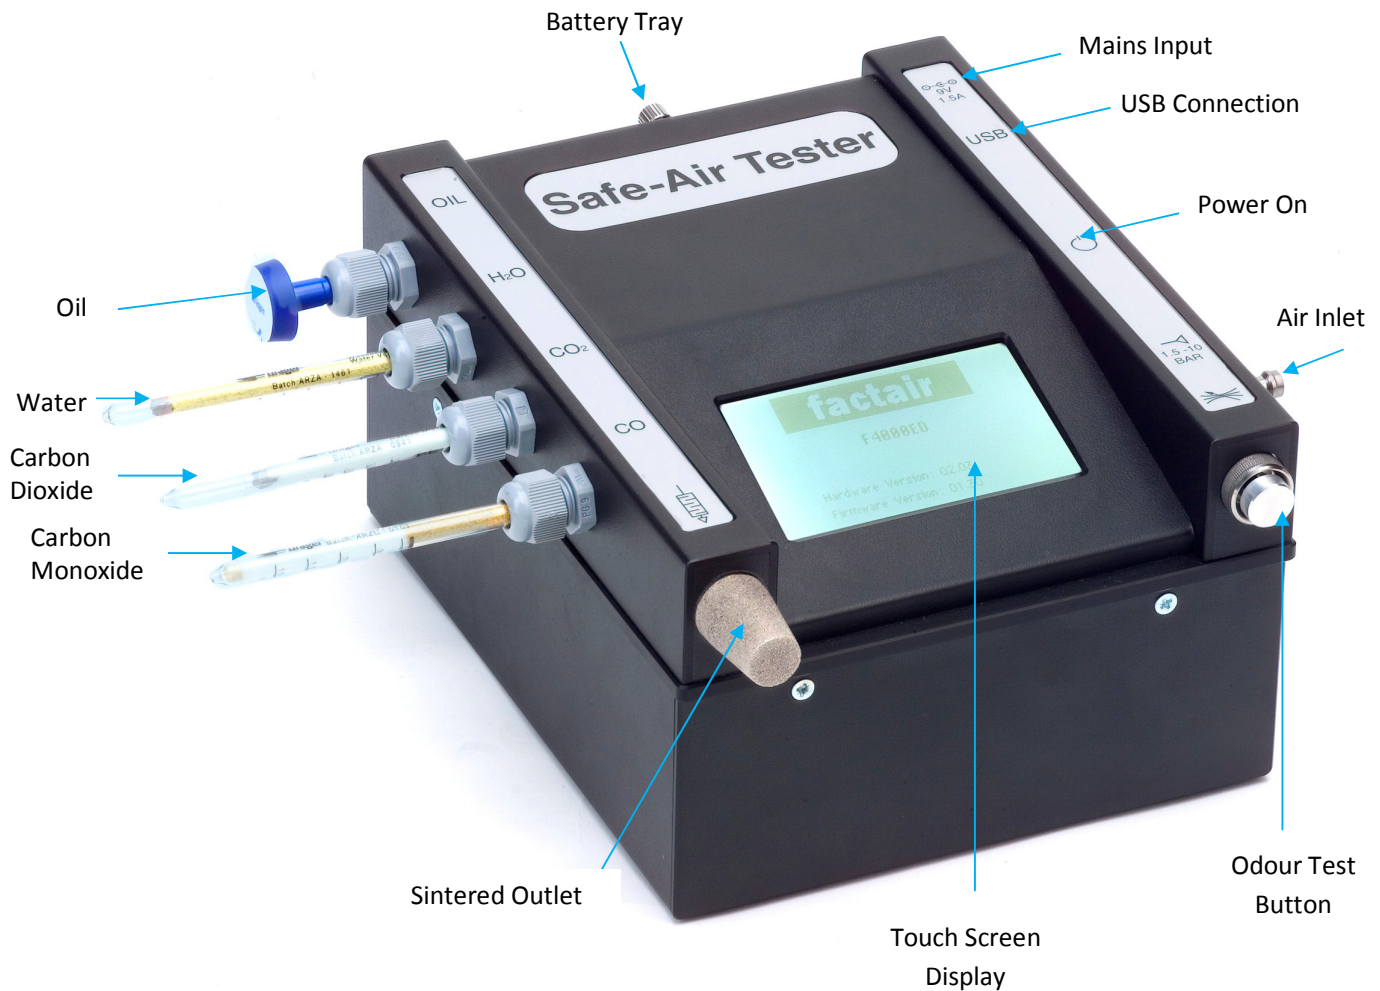

Equipment List:

F4001 Safe-Air Tester

Hard Case

Mains Power Supply

USB Memory Stick

6 x AA Alkaline Batteries

Travel Container for used detector tubes

Tube Tip Cutter

F3002 High Pressure Regulator complete with connection hose

Stylus Pen

Optional Extras

F2216 Tube Kit Includes 10 of each: all Draeger Oil Impactor, H₂O, CO & CO₂

OR

F1798 Tube Kit Includes 10 of each: all Draeger Oil, H₂O, CO & CO₂

F2158 300 bar din to din adaptor. Enables connection of F3002 regulator to compressor charging whip.

1. Pre-Use

Testers are supplied with 6 off size AA alkaline type batteries packed separately and stored underneath the tester within the case. Please note rechargeable batteries are not suitable for use with this instrument.

These must be installed prior to use unless it is the intention to power the unit solely from a mains supply. To install the batteries lift the tester out of its case and open the battery drawer at the rear of the unit and install the batteries.

Note:- It is important to strictly observe polarity when fitting batteries and ensure that they are correctly located.

If on start up the battery level is too low a warning will be displayed on the screen; the test cannot continue until the batteries are replaced or the unit is operated from the mains power supply. During use the battery condition is displayed on the screen.

If the tester is to be used adjacent to a power socket, the mains adaptor may be used. Please note that the unit should be switched off prior to connection or disconnection of the mains supply.

2. Testing- High Pressure Systems 200 & 300 bar

To carry out a test first switch on the machine by pressing and holding the green “on” button, located on the right-hand side of the unit, for approximately 3 seconds. A Stylus pen is provided for use with the touch screen. The display will show the model, serial number, date and time and whether it is within the recommended calibration period. Press the arrow key to progress to the main menu.

To change the default settings, such as date, time, language and units of measure enter the configure tester screen. *See appendix 1 to configure tester.*

To carry out a test press the “begin test” button, the unit will then automatically calibrate the oxygen cell against the surrounding atmosphere; the unit therefore needs to be in a well ventilated area.

Note:- If the temperature is greater than 40°C then the calibration will operate for an extended period to stabilise the oxygen cell.

You now have the option of entering a description for the cylinder reference or test location, if you wish to use numbers press the “function” button. Push the right arrow button when you are ready to proceed.

The unit has 3 test programmes available: High Pressure Systems up to and including 200bar; High Pressure Cylinders above 200bar and High Pressure Charging Compressors. All of the high-pressure tests require the use of the F3002 regulator which has a DIN connector that can accept input pressures up to 300bar.

For cylinders, please ensure the test is carried out on a fully charged cylinder.

Select either (High Pressure Cylinder < 200bar)

(High Pressure Cylinder > 200bar)

(High Pressure Charging Compressor)

Select oil determination method – Select (Impactor Test) press the arrow key.

Note:- For detector tube test refer to Appendix 2 at rear of manual.

Confirm that all settings are correct by pressing the right arrow key. If settings are not correct, press the left arrow key and repeat the previous procedures.

Connect the F3002 high-pressure regulator assembly to the cylinder or charging hose* to be tested, ensuring that the regulator has the correct type of connector for the cylinder. Connect the regulator hose coupling to both the regulator and the inlet of the Tester.

**Note:- A Din to Din adaptor ref.F2158 is required to connect the F3002 high-pressure regulator to a charging hose.*

Open the cylinder valve and check that the cylinder is fully charged by reading the contents gauge on the regulator. (A partially discharged cylinder can give an incorrect water result.) The pressure displayed on the tester will be that of the regulated supply from the cylinder and must not exceed 10bar.

Note:- if the unit is over-pressurised it will automatically shut down and display an overpressure warning; it will then need to be returned to the manufacturer for checking and resetting.

Carry out the odour test by depressing the odour test button and smelling the air exhausted from the sintered outlet. If there is a serious odour problem, fail the sample at this point of the test by pressing the “fail” button. Initiating flows of seriously contaminated air through the tube ports could result in damage to the unit. If the odour test is satisfactory, press the “pass” button.

The unit will now commence a 5-minute purge sequence, during which time an airflow will be passed through all 4 ports. This clears contaminants from previous tests and ensures that a representative sample is being tested.

Once the purge has finished, the Draeger tubes can be prepared for insertion. Remove both ends using the cutter provided. This ensures a clean cut is made and that glass fragments do not fall into the tube ports.

See Appendix 3 covering the use of the Draeger tube tip cutter.

As each tube is prepared it should be inserted into the relevant gland with the arrow pointing away from the unit and tightened firmly.

Note:- Model F4001ED does not require a water tube as it will automatically record the water/dewpoint reading.

The Impactor should be inserted into the oil port; ensure the Impactor has an intact protective seal. This seal must remain in place for the duration of the test.

Once the tubes and Impactor have been inserted, press the “OK” button to start the test. The duration will be displayed as a countdown, together with ambient temperature, oxygen content and pressure.

The status of the individual tests is indicated on the right-hand side of the display. The spinning egg timers indicate tests are active and ticks, tests are complete. The unit can be left until the test time has elapsed.

Once the test is complete, the readings from the 3 tubes and Impactor can now be entered.

To enter the results press the corresponding button on the screen and key in via the numeric pad/button display, press the return arrow and repeat for all readings.

Note:- Instructions on reading detector tubes and impactor, and their safe disposal, can be found in Appendix 4 at the back of the manual.

Once all readings have been entered press the right arrow key, once you proceed beyond this point the results cannot be altered.

The “test complete” screen automatically determines whether the test was a pass or fail and displays all the measurements recorded during the test. If the test was a fail a flashing asterisk would be indicating those criteria which did not meet the standard. Additionally the F4001 automatically calculates the atmospheric dewpoint from the water content that has been entered.

This test result is automatically recorded in the instrument’s memory, which can store up to 10 previous tests. To view these tests return to the main menu and press the “Review Tests” button. Test results are stored accordingly to the date and time they were completed. From this menu previous tests can be viewed or deleted as required.

To disconnect the tester from the cylinder firstly turn off the cylinder valve, then depress the odour test button until all the trapped air is exhausted; it is now safe to disconnect the connection hose and cylinder regulator.

To turn off the tester use the return arrows to return to the main menu screen and press the X in the top right-hand corner of the screen.

Note:- The unit will automatically turn off after a few minutes if left unused at the main menu screen.

3. Exporting Test Results and PC Software.

To transfer test results from the Safe-Air Tester to the PC software, return to the main menu and press the “export tests” button. Insert the memory stick provided with the unit into the USB slot and press “yes”.

Note:- The system will not download duplicate tests, therefore ensure that any test that is already downloaded to the memory stick has been deleted from the tester.

Once the instrument has completed exporting the results to the memory stick you can choose whether to delete the results from the Safe-Air Tester’s memory.

Note:- Before you can import the results you must first install the software on your PC, a copy of the software is available on the memory stick and on our website.

Making sure you have connected your memory stick to your PC, start the software and from the file down menu click on “import test results file” and select the drive location for the memory stick. Multiple test results can be imported by left clicking on the first and then holding the left shift key and clicking on the last record and then click “open”. You will then be able to choose the location where you would like the test results to be stored.

Individual test records can be opened from the file drop down menu by selecting “open a test results file”. Once loaded further information can be added about the following:-

Test location.

Date next test due.

Test engineer and relevant address. *Note:- These details can be saved as default*

When complete you can save the test result file and if required print off a certificate. In the UK, Health and Safety Executive guideline HSG53 recommends test results should be retained for a minimum of 5 years.

Note:- The logo stored within the Tester’s opening screen will automatically become the header logo on the test certificate.

HELPFUL TIPS

With detector tubes

- Ensure that there are no fragments of glass in the tube glands prior to fitting detector tubes, clean if required.
- Always remove the ends of the detector tubes cleanly using the correct tube tip cutter. Do not use pincers or other devices.
- Always remove both ends of the detector tubes prior to fitting.
- Always fit detector tubes with the arrows facing outwards.
- Never break the glass ampoule in the oil tube before the test.
- Only use the detector tubes that the tester is calibrated for.
- Once used, be aware that the tube tip cutter contains ground glass and glass fragments. Take appropriate precautions for the disposal of these. Dispose of as sharps.
- When using the tube tip cutter ensure only a light pressure is applied to the tube whilst rotating for scoring.

General

- Never connect to a non-regulated supply from an HP cylinder or compressor.
- Maximum inlet pressure to the tester is 10bar. If exposed to an overpressure the tester will display an overpressure warning necessitating its return to the manufacturer for checking and resetting.
- If the tester has been used on an excessively wet supply it can be purged dry by running a full test on a known dry source without any detector tubes fitted.
- When using the mains power supply ensure that the tester is switched off prior to connection and disconnection.

For any additional advice and information please contact Factair on: +44 (0) 1473 746400.

Appendix 1

Configure Tester

At this screen you have the following options available.

- (Set Date) Enter the current date using the scroll keys
- (Set Time) Enter the current time using the scroll keys. *Note: - It is a 24-hour clock.*
- (Set Language) Select required language from list available.
- (Set Units) Select pressure and temperature units from list available.
- (Update oil list) Updates stored oil test data for Draeger chemical reagent tubes from a new list stored on a memory stick.
- (Select Standard) Selects test standard from list available.
- (Setup Tester) For manufacturer's use only.

Appendix 2 - Using the F4001 and F4001ED with Draeger reagent type oil tube ref.6728371

From the "select oil detection method" screen select (Detector Tube)

The oil setting defaults to 15 minutes, if you have no knowledge of the type of compressor lubricant being used in the breathing-air system then accept default time and continue to the next screen.

If you can determine with a high degree of certainty the specific compressor lubricant being used, then select (change oil)

The F4001 and F4001ED has within its memory the test data for in excess of 400 different oils, these can then be selected and the unit will automatically set the correct test parameters for that specific oil. The "Select Oil" screen provides 4 options for selecting specific oil settings.

- (List) - Contains test data on all oils
- (Favourite) - To create a list of regularly used oils
- (Custom) - To create a specific test currently not available in (List)
- (Last Used) - Defaults to last used oil test.

Using (List)

From "select oil" screen press (List)

The "oil list" screen has 2 options

- (Filter by Supplier) - Using scroll buttons find and select all oils from a specific supplier.
- (Show all Oils) - Lists all oils by supplier then type reference.

From either of the above methods select the appropriate oil then press right arrow to pass to confirmation screen, continue as per instruction in the main manual.

To create a “favourite” oil list from “select oil “menu select (Favourite)

Use the (+) button to add new oils as described above and use the (–) button to remove oils from the favourite list.

To create a custom oil test from the “select oil” menu select (Custom)

You will then have the following options.

- (Enter name) - Enable name and type of oil to be entered
- (Enter Time) - Enter test time for new oil (Check with Factair Technical for advice)
- (Add to Favourites) - Enables new oil to be added to favourites list.

Appendix 3

Draeger Tube Tip Cutter

The F2187 is especially designed to prevent glass from falling out of the opener by accident. The reservoir for the broken-off tips is easy to empty.

Instructions

1. Place the end of the tube between the three blades, and turn to score the end.



2. Push the tube at an angle to break the tip.



3. Repeat steps 1 and 2 with the other end of the tube



Following information is only for EU-member states:

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Appendix 4

Reading the Draeger Oil Impactor and Chemical Reagent Tubes

Oil Impactor

The Oil Impactor's protective seal must be kept in place for the duration of the test and only removed after the test has been completed.

With a standard measurement range of 0.1 to 1.0 mg/m³ the Impactor has a limit of detection of 0.05 mg/m³. The Impactor can detect all mineral and synthetic oils, it features a series of 3 horizontal lines, each formed by a series of precision manufactured nozzles. These horizontal lines of nozzles are calibrated to a different concentration of oil. When air is passed through these nozzles any oil present in the air is deposited on the glass plate prior to the air being exhausted by vents around its circumference. This allows the user to easily and quickly identify minute quantities of oil.

For tests that pass with an oil concentration of less than 0.05mg/m³, the screen will remain blank. For tests above that read as follows:

The bottom line represents an oil concentration of 0.1 mg/m³. When the oil deposited forms a continuous line then the concentration is in excess of 0.1 mg/m³. The middle line represents a concentration of 0.5 mg/m³, again when the oil deposited forms a continuous line the concentration is in excess of 0.5 mg/m³. The top line represents a concentration of 1.0 mg/m³, again when this forms a continuous line the concentration is in excess of 1.0 mg/m³.



Pass -
greater
than
0.05mg/m³
but less
than
0.1mg/m³



Pass -
greater
than
0.1mg/m³
but less
than
0.5mg/m³



Fail -
greater
than
1.0mg/m³



Fail - greater
than
0.5mg/m³
but less than
1.0mg/m³

Each pack of tubes has its own instruction leaflet but the following notes should help you take readings after the tests have been completed.

Each tube has an expiry date which is located on the back of its storage box.

Oil (67 28371)

REQUIREMENT - THE AIR SHOULD HAVE A MAXIMUM OIL CONTENT OF 0.5 MG/M³ AND SHOULD BE WITHOUT SIGNIFICANT ODOUR OR TASTE.

1. Using the Tube Tip Cutter, place the ampoule section in the platform at the bottom. Note: Make sure the tube is against the back wall of the cutter. Line up the black dot nearest the end of the tube with dot on the cutter



2. With one hand holding the cutter and the other holding the tube. With your thumb against the base of the cutter, apply pressure to the tube. This should break the inner tube.




3. Place your used detector tubes in the F2154 Travel Container, until they can be disposed of properly as "sharps" or glass.



Ensure the oil tube is kept vertical throughout this process

Satisfactory test: - The white crystals will turn translucent and show at worst a slight discoloration.

Failed test: - (Mineral oil) - The white crystals will show a light brown or darker discoloration.
- (Synthetic oil) - The white crystals will show a yellow discoloration
[Note: best seen by comparing with an unused tube].

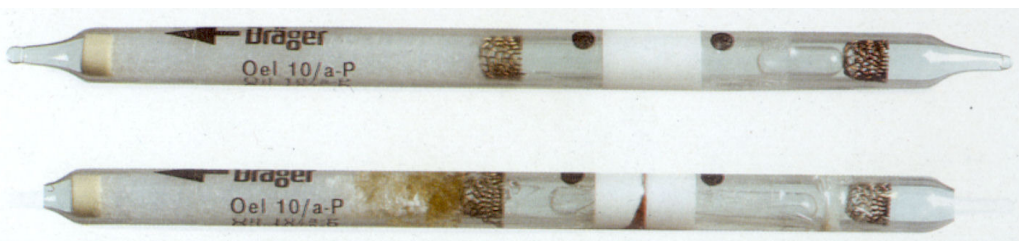


Water (H₂O) (67 28531)

- REQUIREMENTS**
- FOR AIRLINES BELOW 40 BAR THE PRESSURE DEWPOINT TO BE 5°C BELOW THE LIKELY LOWEST TEMPERATURE. WHERE THE LIKELY LOWEST TEMPERATURE IS NOT KNOWN THE PRESSURE DEWPOINT SHOULD NOT EXCEED -11°C.
 - FOR HIGH-PRESSURE CYLINDERS THE FOLLOWING UPPER LIMITS APPLY: - 40 TO 200 BAR = 50MG/M³, ABOVE 200BAR = 35MG/M³
 - FOR HIGH-PRESSURE CYLINDER CHARGING COMPRESSORS THE UPPER LIMIT = 25MG/M³

A reddish brown discoloration will show the extent of the water content, which is read from the scale printed on the tube in mg/m³.


When using the 50-2000 range setting, the tube reading is multiplied by a factor of 10, i.e. a tube reading of 150mg/m³ becomes 1500mg/m³. To establish the pressure dewpoint refer to the graph on the back of the Safe-Air Tester Result Sheet.

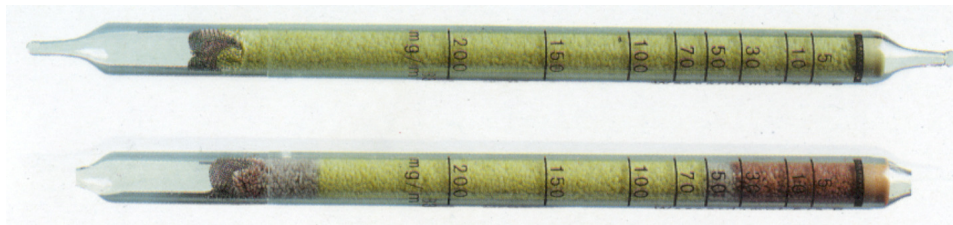

Carbon Dioxide (CO₂) (67 28521)

- REQUIREMENT** - MAXIMUM READING OF 500 PPM.


The media in the detector tube will discolour to show the presence of carbon dioxide. The total length of the discoloration read from the printed scale at that point is a measure of the concentration in parts per million.

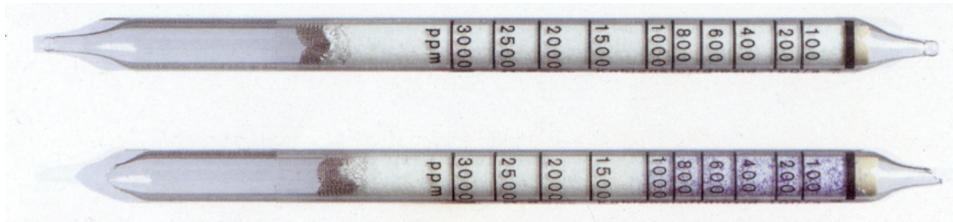

Carbon Monoxide (CO) (67 28511)

- REQUIREMENT** - MAXIMUM READING OF 5 PPM.

The media will discolour to show the presence of carbon monoxide in the air sample. The total length of the discoloration is the measure of concentration read directly from the scale in parts per million.

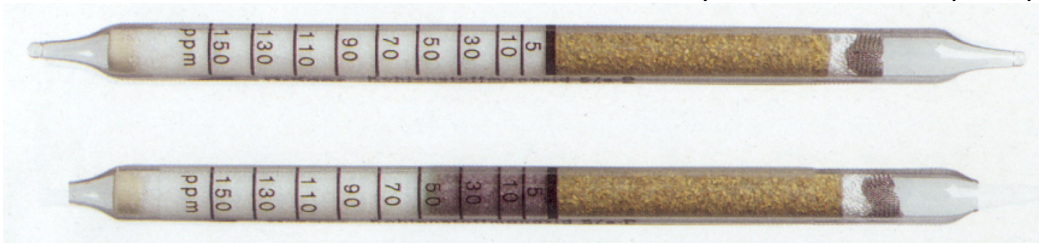

Disposal of Draeger-Tubes

When Draeger-tubes have been used, or unopened tubes have exceeded their expiry date, they should be disposed of using one of the following methods:

Used Tubes

Submerge the tube(s) in a beaker or metal container filled with water and allow to soak for 24 hours. Treat the residual water in accordance with local authority waste regulations (some tube aqueous waste may require neutralisation prior to disposal). Place the tubes in a “sharps” or glass bin wearing protective gloves and safety spectacles. Dispose of the bin via the company’s normal industrial waste disposal method(s) i.e.: landfill or incineration.

OR

Place the tubes in a “sharps” or glass bin wearing protective gloves and safety spectacles. Dispose of the bin via the company’s normal hazardous waste disposal method(s) i.e. landfill or incineration.

OR

Place the tubes in a “sharps” or glass bin wearing protective gloves and safety spectacles. Dispose of the container via incineration.

Unused Tubes

Open the Draeger-tube at both ends using the special tube opener or the cutter on the hand pump. Break any ampoules where applicable. Dispose of the tubes as stated in Methods 1, 2 or 3.

NOTE: *As an alternative a local authority approved waste disposal contractor can be employed to collect used and unused tubes from site and dispose of them in a safe manner.*

Appendix – 5

AIR QUALITY TESTING – WHY?

The required quality of breathing air is stated in EN12021 is to provide information on the safe limits of potential contaminant gases within breathing air and to ensure that the life support gas of oxygen is of an adequate level.

Compressed air for breathing normally originates from a compressor system installed or operating at the place of use and there are various factors that can affect the quality and safety of this air.

- The air intake to the compressor can ingest airborne contamination from local processes and vehicle exhaust fumes which are not removed by standard breathing air filtration. Such air borne contamination may not be continuous but the pollution of the air supply may persist for hours or days.
- Malfunctioning compressors, especially reciprocating type, can produce unsafe levels of both carbon monoxide and carbon dioxide.
- Breathing air filtration has a finite life and can fail causing high levels of oil and water contamination to be present in the air.
- The performance of desiccant filters is dramatically affected by operating temperature. Infrequent validation may result in poor quality air being supplied for an extended period
- Failure of the compressed air aftercooling will result in air entering the filtration at too high a temperature, this will cause the filtration to prematurely fail and pass excess levels of oil and water.
- Malfunctioning dryers can disturb the oxygen concentration to outside safe levels within the breathing air.
- High levels of water in breathing air can freeze within RPE demand valves causing the air supply to fail.
- Insufficient air flow or pressure to the RPE will reduce the protection factor of the RPE and potentially expose the user to ingress of external contaminants.
- The effects of contaminants when breathed at elevated pressure can have a much greater effect on users than it would at normal pressure.
- Changes in the performance of compressor and filtration equipment are usually rapid in nature. Any failure affecting outlet air quality may injure users for an extended period if quality validation is infrequent.
- Odour alone is a poor indicator of air quality, toxic as asphyxiant gasses are often odourless, the limits for oil pollution are lower than the threshold detection level that most people will notice.

All employers have a duty of care to their employees to ensure that the breathing air they are supplied with is adequate for the RPE they are using and safe to breathe. The points raised above may form the basis of the risk assessment called for in the European guidance document for the selection and use of respiratory protective devices EN 529 which says in annex A :-

A.4.5 Compressed air for breathing apparatus from EN529

A.4.5 Compressed air for breathing apparatus (EN12021)

A.4.5.1 General

A compressor system will have produced the compressed air supplied to a breathing apparatus. The compressor system may be used for filling individual high-pressure vessels or those on a mobile trolley or to supply air direct to breathing apparatus and other air-tools used in the workplace.

Contaminants can mix in compressed air at various stages of its production and supply. Any presence of contaminants in acceptable quantities will render the air unsuitable as “breathable air” and can threaten the health and safety of the respiratory protective device wearer. For this reason quality assured compressed air should be supplied to a breathing apparatus. EN12021 stipulates the minimum quality standards for breathable compressed air and includes the levels for oxygen, carbon monoxide, carbon dioxide, lubricants, water and other types of contaminant and odour.

A.4.5.2 Compressor system

A.4.5.2.1 General

A competent person should be consulted when planning or installing a compressed air system for producing breathable air. This will help to minimise problems associated with compressors and the down stream effects on the quality of the air supplied. Table A.2 provides a summary of the main elements associated with a compressor system for producing breathable air. In addition to the careful and installation of the system it should be maintained by a competent person to ensure the safe operation of the system.

The compressor should be installed in an area providing sufficient space on all side to ensure good ventilation. The area should be cool as possible but avoid place where freezing is possible. The air intake point should be located in open air and away from potential contaminants (e.g. not close to ventilation outlets or in down stream of the outlets or near vehicle exhaust emission points).

A.4.5.2.2 Air purification elements

The air purification elements should be placed in the correct sequence to ensure the delivery of acceptable quality breathing air. These purification elements should be replaced in accordance with the advice provided by the competent person and the manufacturers of these elements.

A.4.5.2.3 Testing and inspection

The volume flow and quality of the supplied air should be thoroughly tested as specified by a competent person after risk assessment.

Permission to reproduce extracts of EN529 is granted by BSI. British Standards can be obtained from BSI Customer Services, 389 Chiswick High Road, London W4 4AL. Tel: +44 (0)20 8996 9001. email: cservices@bsi-global.com

COSHH L5
(Fifth Edition 2005)
EXTRACTS FROM CODE OF PRACTICE RELATING TO
RESPIRATORY PROTECTIVE EQUIPMENT (RPE)

- 178 The maintenance, examination and tests should be in accordance with the manufacturer's instructions. Examinations should comprise a thorough visual examination of all parts of the respirator or breathing apparatus, to ensure that all parts are present, correctly fitted, and the equipment is in good working order. In particular, the examination should ensure that the straps, facepieces, filters and valves are sound and in good working condition. For powered, and power-assisted respirators, test should:
- (a) be made on the condition and efficiency of those parts;
 - (b) ensure that the battery pack is in good condition; and
 - (c) ensure that the respirator delivers at least the manufacturer's recommended minimum flow rate.
- 179 For RPE incorporating compressed gas cylinders, tests should include the condition and efficiency of all parts, the pressure in the cylinders and the volume flow rate.

Frequency of examination and tests

- 180 The quality of the air supplied to breathing apparatus should be tested at least once every 3 months and more frequently when the quality of the air supplied cannot be assured. Where the air supply is from mobile compressors, the employer should ensure that wherever a compressor is located, the quality of air it supplies is not compromised by nearby contaminants. In every case, the air supplied to a breathing apparatus should meet the quality standard recommended in clause C.1.2 of BS: 4275: 1997 *Guide to implementing an effective respiratory protective device programme*.¹⁹ However, BS: 4275 recommends that all contaminant levels should be below one tenth of the OELs. As it is not reasonably practicable to test for all contaminants, the risk assessment made under regulation 6 should guide what other contaminants will require testing.
- 181 Thorough maintenance examinations, where appropriate, tests of items of RPE, other than one shift disposable respirators, should be made at least once every month, and frequently where the health risks and conditions of exposure are particularly severe.
- 182 However, in situations where respirators are used only occasionally an examination and test should be made prior to next use and maintenance carried out as appropriate. The person who is responsible for managing the maintenance of RPE should determine suitable intervals between examinations, but in any event, the intervals should not exceed three months. Emergency escape-type RPE should be examined and tested in accordance with the manufacturer's instructions.
- 183 Suitable arrangements should ensure that no employee uses RPE which has previously been used by another person unless it has been thoroughly washed and cleaned in accordance with the manufacturer's instructions.

- 184 The record of each thorough examination and test carried out should include:
- (a) the name and address of the employer responsible for the RPE;
 - (b) particulars of the equipment and of the distinguishing number or mark, together with a description sufficient to identify it, and the name of the maker;
 - (c) the date of examination and the name and signature or other acceptable means of identifying the person carrying out the examination and test;
 - (d) the condition of the equipment and details of any defect found, including the canister or filter respirators, the state of canister and the condition of filter;
 - (e) for self-contained compressed air/gas breathing apparatus, the pressure of air/gas in the supply cylinder; and
 - (f) for powered/power-assisted respirators and breathing apparatus, the volume flow rate to ensure that they can deliver at least the manufacturer's minimum recommended flow rate.

Keeping Records

185 Employers may keep records in any format, e.g. on paper or electronically. They should be kept readily accessible and retrievable at any reasonable time for examination by safety representatives or inspectors etc.

Cleaning protective clothing

186 When necessary, protective clothing contaminated by substances hazardous to health should be cleaned before their next use. For example, where protective equipment such as plastic aprons become contaminated, they should be thoroughly washed and hung up to dry before employees leave the work area for a rest, meal or break. This is important to prevent any hazardous substance on the apron from later contaminating the wearer when it is reused.

Accommodation for personal protective equipment

187 Employers should ensure that accommodation is provided for PPE so that it can be safely stored or kept when it is not in use. The adequacy of the accommodation will vary according to the quantity, type and its use e.g. pegs, (labelled) lockers, shelves or containers etc. The storage should be adequate to protect the PPE from contamination, loss or damage by, for example, harmful substances, damp or sunlight. Where quantities of PPE are stored, equipment, which is ready for use, should be clearly segregated from that which is awaiting repair or maintenance. Where PPE becomes contaminated during use, and especially by biological agents, accommodation should be separate from any the employer provides for ordinary clothing and equipment. Employers may also have duties under the Workplace (Health, Safety and Welfare) Regulations 1992 to provide accommodation for PPE

188 All PPE should be checked regularly to ensure it continues to function and provide protection. The types of checks should be suited to that item of PPE and able to detect significant deterioration. The more likely the performance of a particular item of PPE is to deteriorate the more often it needs checking. Who ever does this work should be sufficiently trained to identify deterioration and significant faults. Equipment, which has deteriorated significantly or is faulty, should be effectively repaired or disposed of safely.

Reproduced from COSHH Approved Codes of Practice L5 by Factair Ltd with the permission of the Controller of HMSO.

Respiratory Protective Equipment at Work

Appendix 3: Quality of Air for BA

Air quality

1. Air supplied to BA should be clean and safe to breathe. The COSHH ACOP¹ requires that the quality of air supplied to BA should be assured.

Fresh air hose

2. You should securely anchor the inlet for fresh air hose BA in an area that is free of contaminant. This can usually be achieved by siting the inlet well way from the work area (eg in free air outside the building), and upwind of any local sources of airborne contamination (eg vehicle exhaust).

Compressed air

3. Compressed air for BA normally originates from a compressor system. The maintenance, examination and testing of compressors should be carried out according to the manufacturer's instructions. The siting of air inlets to compressors should follow the same principles as for fresh air hose. However, because compressors themselves can generate and concentrate a wide range of contaminants, you should take extra care in assuring air quality. As the BA wearer's life and health depends on the air supplied by the compressor, you should ensure that the air supplied meets the quality requirements in Table A3.1, which is based on recommendations in BS 4275,¹⁸ and the air flow rate requirements of the BA manufacturer. Compressors which are moved from site to site, such as those used by the emergency services, will require a higher standard of maintenance, and should be sited so that the quality of air they provide is not compromised by nearby contaminants.

Substance	Requirement
Oxygen	20.8% by volume \pm 1%
Carbon monoxide	< 5 ml/m ³ (< 5ppm by volume)
Carbon dioxide	< 500 ml/m ³ (< 500ppm by volume)
Oil mist	< 0.5 mg/m ³
Other contaminants	None present at > 10% of the relevant exposure limit
Odour/taste	No significant odour or taste
Liquid water	None present
Water vapour	Air up to 40 bar: Pressure dewpoint 5°C below minimum storage temperature if known or <-11°C if unknown Air from 40 to 200 bar: < 50 mg/m ³ Air > 200 bar: < 35 mg/m ³ Air for filling cylinders: < 25 mg/m ³

Periodic testing of air quality

4. The purpose of periodic tests of air quality is to ensure that the control measures you have put in place are delivering air quality as indicated in Table 13. The frequency of such tests should be based on a risk assessment, but the COSHH ACOP¹ recommends that periodic tests should be carried out at least every three months, and more often when the quality of air cannot be assured to these levels. Testing for these components may be carried out using any appropriate method, eg:
 - simple colour change tubes;
 - on-line gas testers;
 - sample collection for laboratory analysis elsewhere.
5. The supplier of your compressor or BA should be able to advise you on the best method for you. Records of air quality tests must be kept for five years.

Continuous monitoring

6. Compressors are available which include purifiers with automatic self-monitoring systems. These may be used as a substitute for periodic testing of the quality of breathable air if:
 - they can remove and effectively monitor for contaminants listed in BS 4275,¹⁸ including foreseeable substances identified in your risk assessment. If the system cannot monitor for all these contaminants, then you will have to have additional procedures in place to ensure that the air delivered is suitable for breathing;
 - it has been shown to be reliable for the substances being monitored;
 - the air quality monitoring takes place at a suitable point in the supply line;
 - safety systems are in place to cope with possible malfunctions of the self-monitoring system.
7. If such a system is fitted and used, the need for quarterly (or more frequent) periodic testing of air quality may be removed. However, it will not be possible to dispense with periodic testing of air quality altogether. The compressor and purifier is an 'engineering control system', for which thorough examination and testing is still required by COSHH (typically at a maximum interval of 14 months). This thorough examination should include tests of the air quality produced by the system.

© Crown copyright material is reproduced with the permission of the Controller of HMSO and Queen's Printer for Scotland.

Source Acknowledgement:

HS(G)53 Respiratory Protective Equipment at Work ISBN 071762904 Health and Safety Executive 2005

Material:

Excerpt from Appendix 3 and one table "Quality of air for Breathing Apparatus" from HG(S)53 Respiratory Protective Equipment at Work. Health and Safety Executive (ISBN 071762904)

factair

Factair Ltd

49 Boss Hall Road

Ipswich

Suffolk

IP1 5BN

UK

Tel Sales: +44 (0) 1473 746400

Tel Hire: +44 (0) 1473 746444

Fax: +44 (0) 1473 747123

Email: enquiries@factair.co.uk

www.factair.co.uk

