




Mirror Juliet Installation Instructions

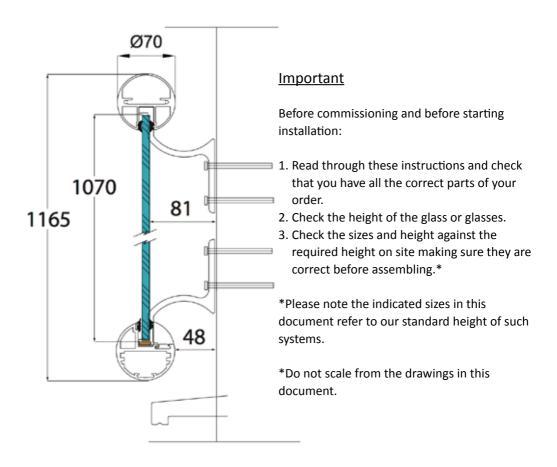

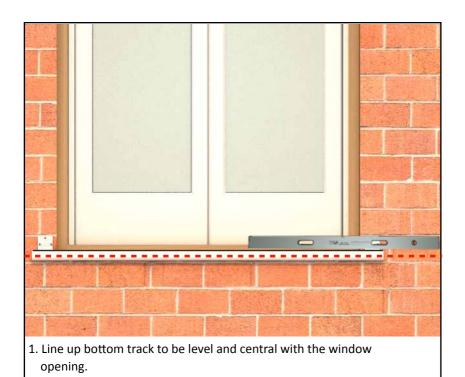


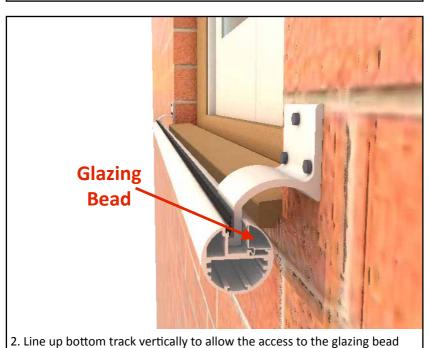


from the inside.



3. When properly lined up fix the bottom track brackets firmly to the wall. (Use a level to make sure it is horizontally level.)

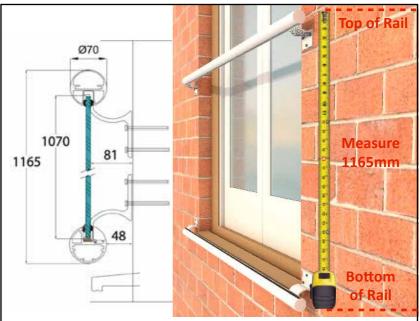

4. Measure the correct height of the handrail position using attached drawing. Do not scale from this drawing.

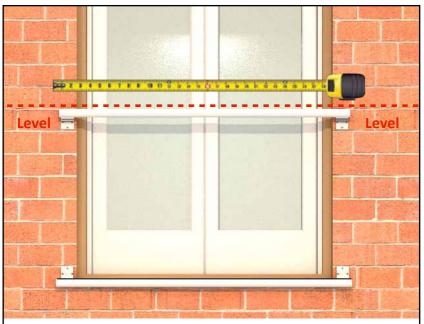


5. Centre the handrail to be central with window giving an equal overlap on both sides.



6. When properly lined up, fix the handrail firmly to the wall through the brackets.



7. Remove glazing beads if in place.

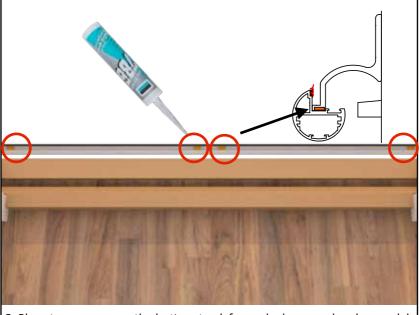


8. Place two spacers on the bottom track for each glass panel and use a dab of silicone to keep them in place.



9. Remove any stickers, writing or spacers that are stuck on the glass.




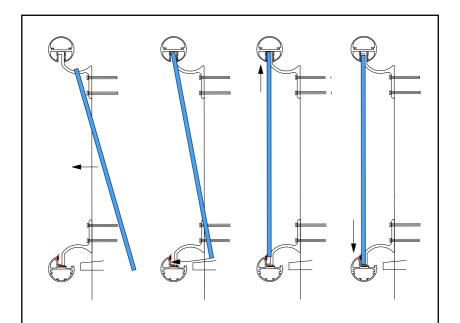


10a. Follow these instructions to insert the glass panels in place.




11. Replace the glazing bead.

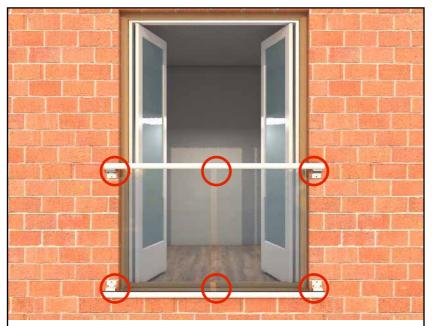

12. Line the glasses up in position so that they are spaced correctly between each other and the wall.

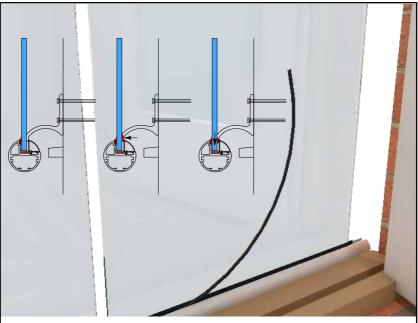

13. Insert the 3mm rubber gasket in the bottom track between the glass and the glazing bead. (Use soap and water to ease the process.)

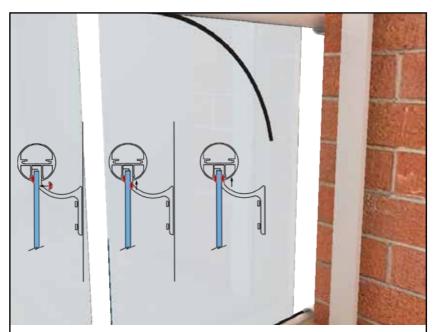

14. Insert the two 3mm rubber gaskets on both sides of the handrail. (Use soap and water to ease the process.)



15. Trim off excess rubber.











© Balconette 2016 www.balconette.co.uk 01342 410411

Balconette is a trading name of Balcony Systems Solutions Limited.

Registered in England under company registration no. 06937600.

Registered office: Unit 6 Systems House, Eastbourne Road, Blindley Heath, RH7 6JP