


**WHITE**

## Universal BasinSeal profile from Byretech

**BASIN  
SEAL**

Part No. 1m - BASW001  
Part No. 2m - BASW002

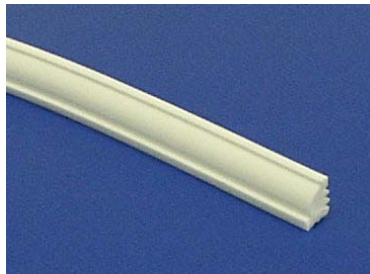

Complete kit fully seals in your hand basin and matches the Byretech BathSeal Profile


### Tools required



- Stanley Knife or scissors
- Kitchen roll to wipe fingers

### Installation Information.

- Remove any existing silicone sealant with a sharp knife and clean with alcohol wipe.
- Lay BasinSeal profile along your basin and cut to length using a sharp knife / scissors.
- Immediately wipe the BasinSeal profile with the alcohol wipe provided.
- Open the silicone sealant supplied and squeeze a uniform amount of sealant along the length of your basin where it meets the wall / tiles.
- Gently offer up the BasinSeal to the wall / silicone and push gently into place.
- wipe away any excess sealant with finger and leave to set for 3 hours.

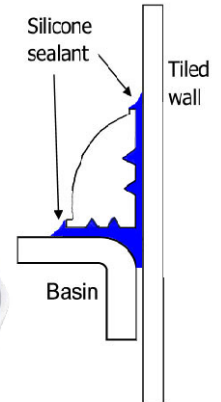

**Byretech Ltd**

The Bathroom Water Damage Prevention specialists

Note. Byretech recommends that all black mould in the bathroom is removed prior to fitting its products.

Byretech Ltd  
Unit 51 Padgets Lane, South Moons Moat,  
Redditch, Worcestershire B98 0RD UK.

Phone: +44 (0) 1527 522 522 Fax: +44 (0) 1527 522 111  
E-mail: [info@byretech.com](mailto:info@byretech.com) Web: [www.byretech.com](http://www.byretech.com)