



Traditional Juliet Installation Instructions

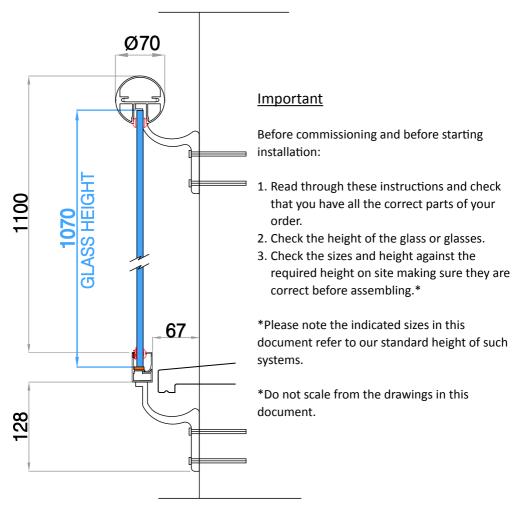

© Balconette 2016 | www.balconette.co.uk | 01342 410411 Unit 6 Systems House | Eastbourne Road | Blindley Heath | Surrey | RH7 6JP

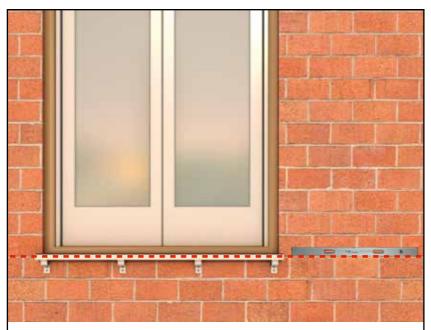


1. Line up bottom track to be level and central with the window opening.



2. Line up bottom track vertically to allow access to the glazing bead from the inside.



3. When properly lined up, fix the bottom track brackets firmly to the wall. (Use a level to make sure it is horizontally level.)

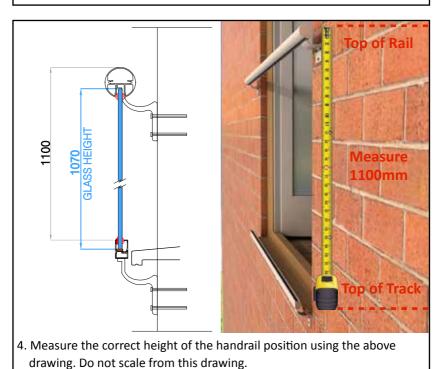




5. Centre the handrail to be central with window giving an equal overlap on both sides.




6. When properly lined up, fix the handrail brackets firmly to the wall.




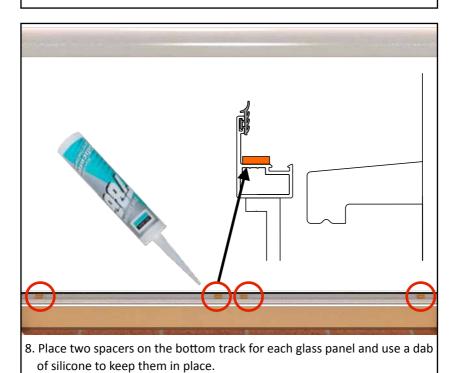






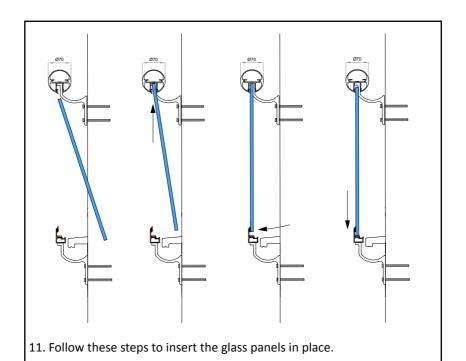

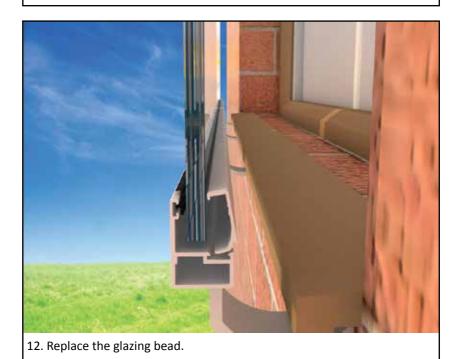




13. Line the glasses up in position so that they are spaced correctly between each other and the wall.

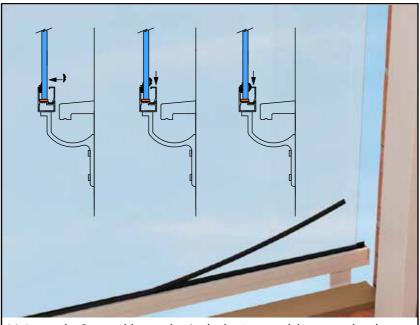

14. Insert the 3mm rubber gasket in the bottom track between the glass and the glazing bead. (Use soap and water to ease the process.)

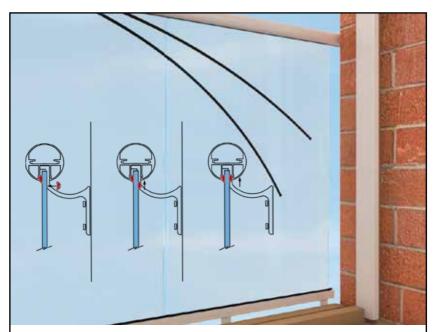

15. Insert the two 3mm rubber gaskets on both sides of the glass in the top handrail. (Use soap and water to ease the process.)



16. Trim off any excess rubber.











© Balconette 2016 www.balconette.co.uk 01342 410411

Balconette is a trading name of Balcony Systems Solutions Limited.

Registered in England under company registration no. 06937600.

Registered office: Unit 6 Systems House, Eastbourne Road, Blindley Heath, RH7 6JP