

# Big Boy Concrete-in Ground Anchor (Drop Down Telescopic Lock Point)



Shown in ground



Use lift handle to pull up



Slip your chain through




**Big Boy Overall Dimensions: H-260 x 200 x 150mm** (approx. 10.5 x 8 x 6")

(suggested minimum hole size: 300mm deep x 240 x 200mm)

## Recommended Fitting Instructions for Flush Fitting

**Please note:** these Anchors Must be secured into good solid concrete

### Installation Diagram & Guide

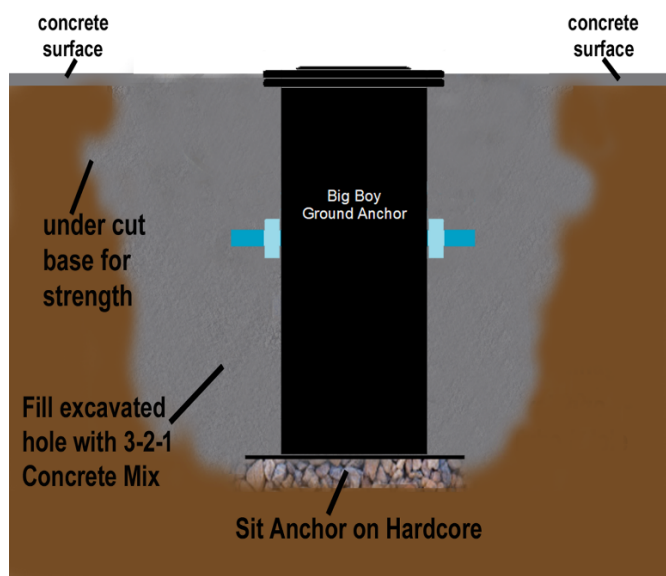

Cut a hole in concrete / ground surface and undercut the base where possible for extra strength

Sit the Anchor on a hard-core base to allow any moisture, rainwater, etc. to drain away

Position the Anchor flush with the original concrete level and fill the excavated hole with a good 3-2-1-mix of concrete (3 parts aggregate + 2 parts sand + 1 part cement), allow concrete to set overnight before use.



Insight Security, Units 1&2 Cliffe Industrial Estate,  
Lewes, East Sussex, BN8 6JL  
t: 01273 475500 e: [sales@insight-security.com](mailto:sales@insight-security.com) [www.insight-security.com](http://www.insight-security.com)

