



Decorative panels



decorative panels

An easy to install, high finish, waterproof and hygienic wall covering. Increasingly used as an alternative to tiling.

Applications

Suitable for wall and ceiling mounting, and although specifically conceived for bathroom and showers, are equally suitable for other living or commercial space.

Description

The system is made up of PVC panels, 10mm thick, with a tongue and groove profile, which are easily fitted together and fixed with adhesive.





+



proclad

DECORATIVE PANELS

Tel: 0114 2799188
 Fax: 0114 2799175
 sales@ipsluk.co.uk
 www.ipsluk.co.uk



Samples

Samples are available on a next day delivery basis; contact us with details of which styles and colours are of interest.

Deliveries

Orders are usually despatched from stock. We prefer to deliver by our own vehicles but if necessary we also despatch by carriers for 'next day' delivery. Collection can be made from our Sheffield premises.






decorative panels for ceilings

Ceiling Panels

Easy to install, high finish, waterproof, no maintenance, see below for colour range.



Ceiling plank with Silver Highlights 250mm wide x 10mm thick



Ceiling plank with no Silver Highlights and all wall panels 250mm wide x 10mm thick

All panels are suitable for ceiling mounting, although the styles most commonly used on ceilings are Satin White (5m), Gloss Pearl White (5m). White with Silver Highlights (5.85m). For longer spans use the "H" joint (shown below).


Panels have a tongue and groove jointing system that makes fitting easy. Along the leading edge of each plank is a thin flange that is screwed through for fixing each screw is hidden as the next panel slides into place. Screws should be every 30-50cm either to the existing ceiling or to pre-fitted battens. Down lighters may be fitted through the panel as long as panels are not heated beyond their 60°C softening point. The perimeter can be finished using an Edge Trim or Ceiling Cove. The last panel is fixed in place, then cut off the back of the last cove/edge trim and fix in place with adhesive. Coving must be mitred to finish corners.



J Edge




H Joint

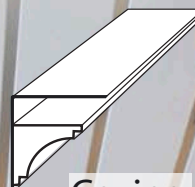

Coving



QU15
15mm
Quadrant




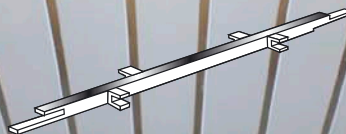


Optional 2mm chrome trim for end of Moderna panels



Finishing Trims

Please ask us for fitting instructions. Wall panels will require 2 tubes of adhesive per pack.

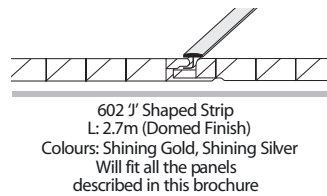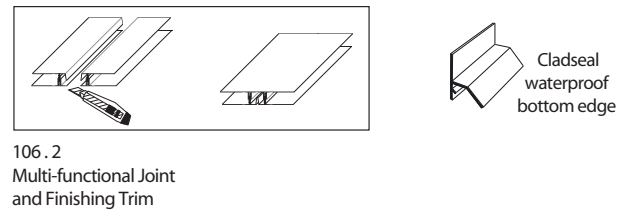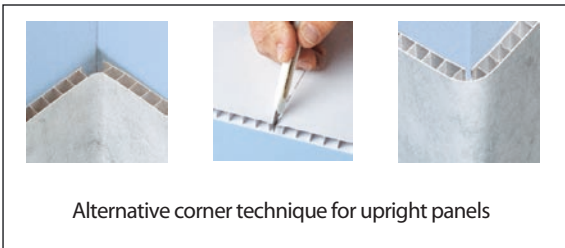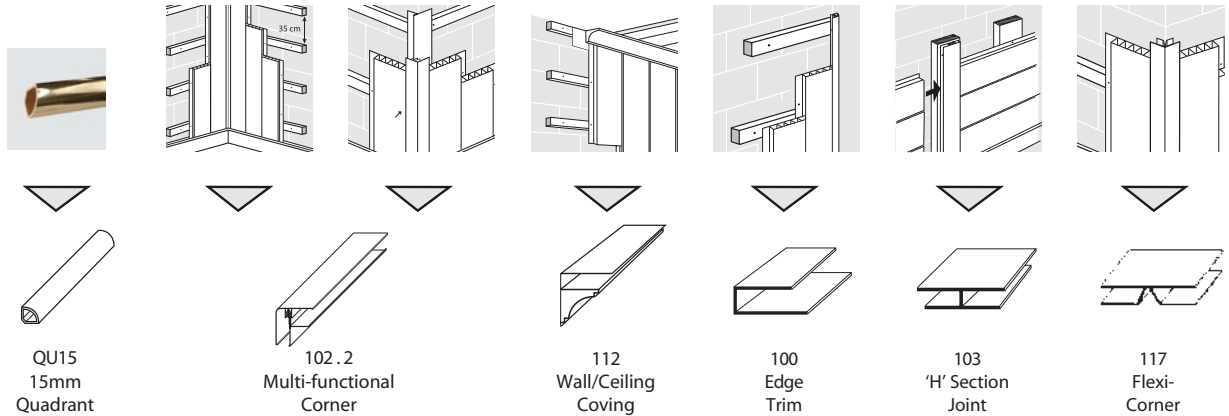

Highlight Strips

