

Compact diaphragm valve for aseptic and sterile fluid applications.

saline solutions monomers pill coating vial filling food processing



The 754V-SS aseptic dispense valve system accurately controls the application of most low to medium viscosity fluids. The seal-less design incorporates an inert PTFE diaphragm that isolates the actuator from the valve.

The unique design of the 754V-SS provides a fluid flow path free of any entrapment areas, critical for sterile and aseptic fluid applications. Wetted parts are 316L stainless steel and PTFE, which are suitable for CIP (clean in place) and SIP (sterilize in place) processes.

Flow volumes range from 0.5 microliter deposits to a continuous flow rate of 14.0 ml/s (H₂O at 30psi pressure). The valve closes after each cycle with a fast, clean cut-off that eliminates drips.

Benefits

- Accurate, consistent shot size
- Easy to clean or sterilize in place
- Low maintenance
- Clean cutoff eliminates drips
- Simple to set up and operate

Features


- Compact size and weight
- Adjustable fluid flow control
- Positive shutoff, no seals
- Tamper-resistant design
- FDA-compliant wetted parts
- Diaphragm life exceeds 1x10⁸
- Stainless steel cylinder body
- Exceeds 500 cycles per minute

Performance Guarantee

Electronic pdf files of Nordson EFD manuals are also available at www.nordsonefd.com


To order, specify EFD part# 754V-SS

Aseptic valve systems

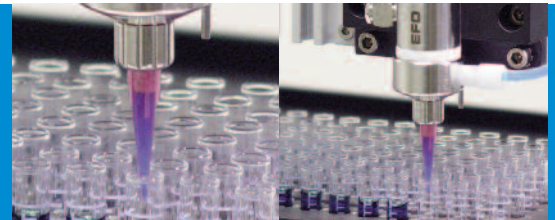

The complete system includes the 754V-SS valve, ValveMate™ 8000 controller, the fluid reservoir and dispense tip.

Expert technical assistance and high quality standards ensure productive, trouble-free performance. Nordson EFD offers a full line of reliable dispensing systems to meet your specific application requirements.

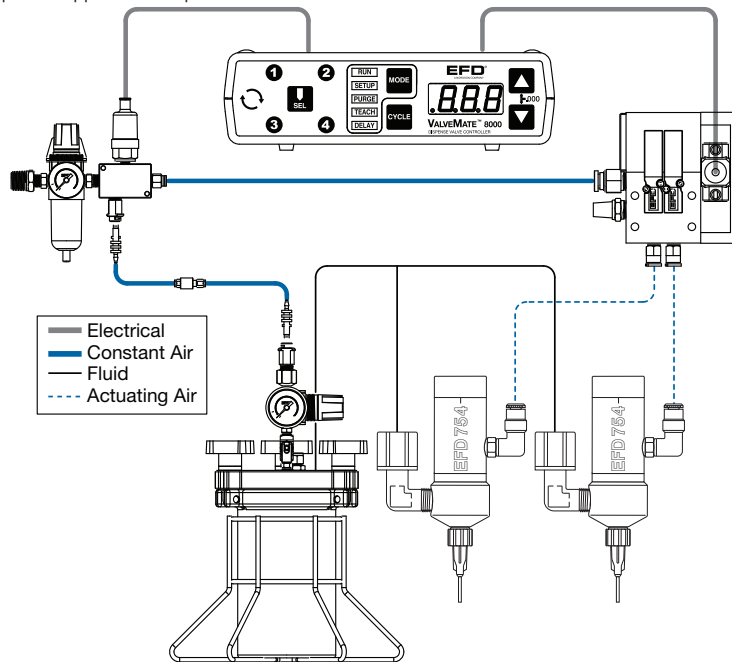

754V-SS Valve

The 754V-SS valve is used with ValveMate 8000 controllers or an Nordson EFD TT automation system for precise, repeatable outputs of low to medium viscosity fluids.

The 754V-SS wetted components are made of stainless steel and PTFE to conform to biopharmaceutical regulations. Each valve can be calibrated with the stroke reference knob for process control.

The amount dispensed depends on valve open time, fluid pressure, fluid viscosity, flow adjustment and tip size.

Size: 77.5 mm x 26.9 mm diameter (3.05" x 1.06")

Weight: 193.3 g (6.82 oz)

Actuating air pressure required: 70 psi (4.8 bar)

Maximum fluid pressure: 70 psi (4.8 bar)

Fluid inlet thread: 5/16-24 UNF

Fluid outlet thread: Male luer lock

Mounting: None

Cycle rate: Exceeds 500 per minute

Air cylinder body: Type 316L stainless steel

Fluid body: Type 316L stainless steel

Piston and piston rod: Type 316L stainless steel

Tip adapter: Integrated, threadless


Diaphragm: PTFE

Wetted parts: Fluid body, diaphragm, tip adapter

Maximum fluid operating temperature: 43°C (110°F)

Maximum temperature–Autoclaving: 260°C (500°F)

All stainless steel parts are passivated.

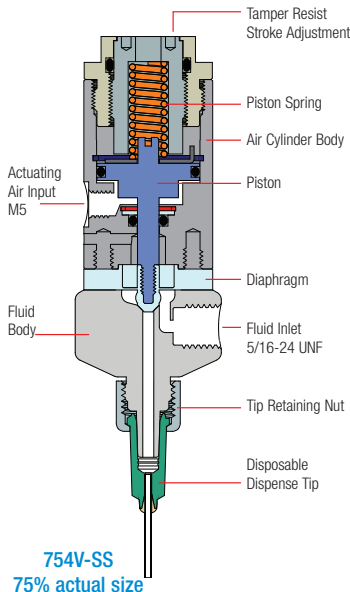

754V-SS

75% actual size

ValveMate 8000 Controller

Valve open time is the primary control of deposit size. The ValveMate controller puts push-button adjustment of valve open time where it needs to be — at the valve.

- Multi-valve control - up to (4) valves
- Partner to Programmable Logic Controller (PLC)
- Easy deposit size control
- Increased production output
- End user convenience
- On-the-fly adjustability
- Maximum machine efficiency

Automation: XYZ & XYZR Robot Dispensing Systems

Nordson EFD offers a wide selection of XYZ and XYZR robot systems that are fully compatible with ValveMate valve controller systems. Consistent, accurate, repeatable and complex dispensing applications can be easily performed with EFD robots, with working envelopes that range from 200 x 200 x 50mm to 510 x 510 x 100mm. Scara robot systems are also available for larger, heavier products or inline dispensing applications.

Fluid Reservoirs

Nordson EFD reservoirs are supplied with precision, constant-bleed regulators to ensure consistent fluid pressure to the valve.

Tank reservoirs are available in 1.0, 5.0 and 19.0 liter capacities. Cartridge sizes range from 2.5 to 32 ounces (75cc to 950cc).

Dispense Tips

The correct tip selection is very important to achieve proper performance of dispense valves.

The 754V-SS valves are packaged with a dispensing kit for maximum flow control. The kit includes smooth-flow tapered tips in sizes ranging from 14 to 25 gauge, precision stainless steel tips in sizes ranging from 14 to 21 gauge, and sealing tip caps.

For Nordson EFD sales and service in over 30 countries, contact EFD or go to www.nordsonefd.com

East Providence, RI USA
USA & Canada: 800.556.3484; +1.401.431.7000
info@nordsonefd.com

Dunstable, Bedfordshire, UK
0800 585733; +44 (0) 1582 666334
Ireland 00800 8272 9444
europa@nordsonefd.com

Nordson India Private Limited
+91 80 4021 3600 Mobile: +91 98450 48481
india@nordsonefd.com

China: +86 (21) 3866 9006
china@nordsonefd.com

Singapore: +65 6796 9522
sin-mal@nordsonefd.com

The Wave Design is a trademark of Nordson Corporation.
©2012 Nordson Corporation v101212

